P210 AV Set Up



1. Check Cable Connections

- Make sure all cables and adapters are firmly connected.
- If you don't see an image, or it is very distorted, detach and re-attach the adapter. Display resolution details are in **Step 2**.



Speakers

2. Projector Settings

- Turn **on** the computer first
- Turn **on** the projector using the remote. (point remote to projection wall)
- Set projector input to **HDMI** by using the **SOURCE** button.
- To mirror your image, select **Mirror** mode by clicking the display icon on the top right of screen. Select Use as Seperate Display to Extend Image



3. Resolution Settings

- To adjust resolution, open **System Preferences**, and go to **Displays**
- Set resolution for computer and projector as shown below

		Displays		



DO NOT leave projector set to 4 by 3 ratio! Press **menu** button, under **ASPECT RATIO**, select **AUTO**.

KEYSTONE IMAGE:

If image is warped, and appears as a trapezoid, use KEYSTONE buttons on remote to straighten.

	VAZZ47-FHD							
1	Icport-201732	Optimize for:	PJD7820HD	O				
	PJD7820HD	Resolution:	O Default for Display					
			 Scaled 					
			1920 × 1080		Displays		Search	
			1600 × 900					
			1280 × 720					
			960 × 540 (HiDPI)	VA2247-FHD	Use as:	Main display	©	
				Icport-201732	Optimize for:	PJD7820HD	0	
			Show all resolutions	PJD7820HD	Resolution:	 Default for Display 		
		Color Profile:	VA2247-FHD			Scaled		
		Refresh Rate:	60 Hertz		Color Profile:	PJD7820HD	0	
		Rotation:	Standard		Refresh Rate:	60 Hertz	0	
		?			Underscan:	off	More	
						if your image is cut off on the projector adjust Underscan with this slider		
					?		Done	
				Add Display 👻 Display Set	tings	Universal Control	Night Shift ?	

* For further assistance, please visit the Port Multimedia Office, in Room P228.