


Do not turn wifi on for printing - an ethernet cable is connected!

P214 AV Set Up

1. Check Cable Connections


- Make sure all cables and adapters are firmly connected.
- If you don't see an image, or it is very distorted, detach and re-attach the adapter.

Turn Power on and adjust volume levels. You will see levels light up on soundbar. Use volume buttons on the keyboard to adjust levels as needed.

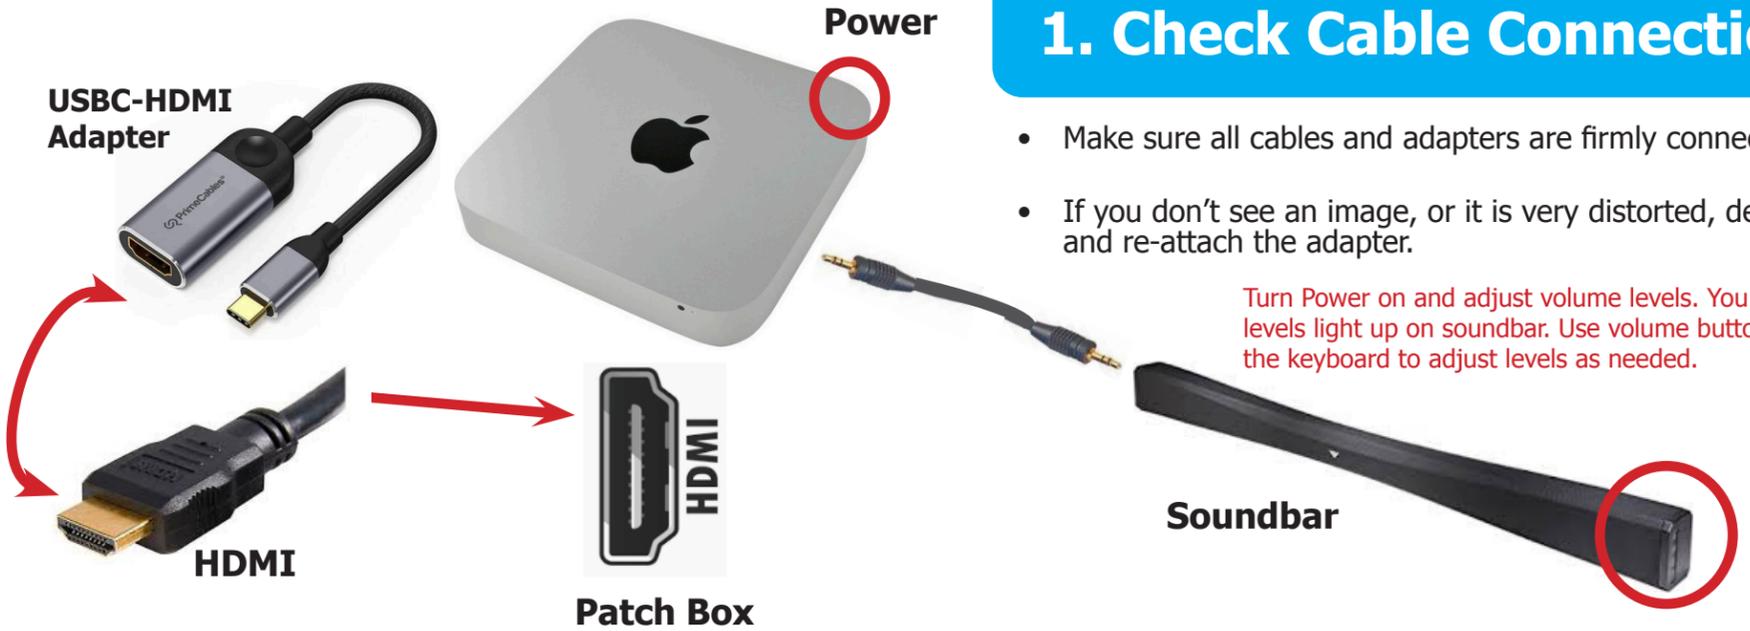

2. Projector Mode


1. Turn **on** the computer first.
2. Turn **on** the projector: see projector controls on this help sheet.
3. Press the **Source Search** button on projector if you do not see an image projected. You may also use the **Menu**.
4. On the computer, to **mirror** or **extend** your image, click the **Control Centre Button** on the top right of the screen.
5. Select **Screen Mirroring**.
6. Click on **Change**.

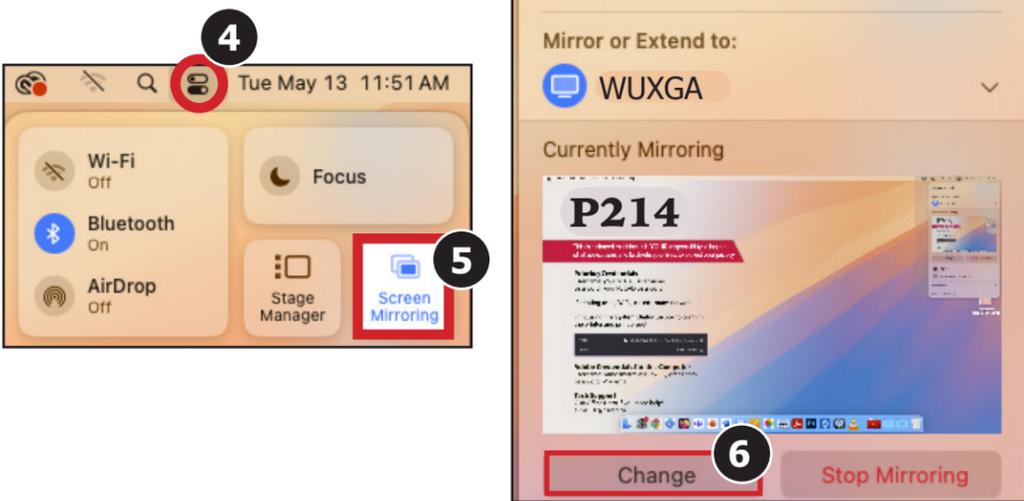

7. Select the Display Setting you would like to use.




If your image is cut off on the projector, go to **System Settings > Displays > Underscan** Adjust Underscan with this slider.

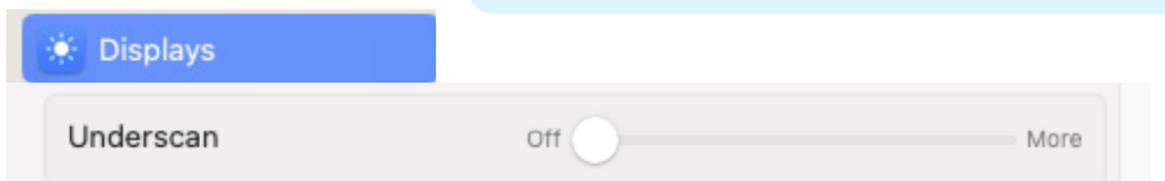


TECH SUPPORT

Visit Office P228

email: lc@nscad.ca

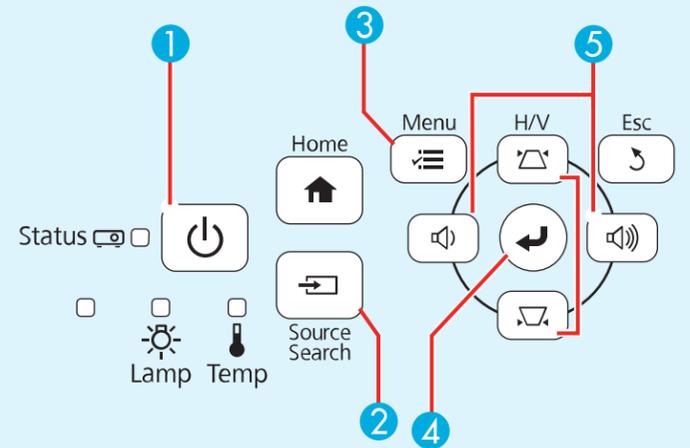

- 1 Power button
- 2 Source search button
- 3 Menu button
- 4 Enter button (selects options)
- 5 Keystone adjustment buttons

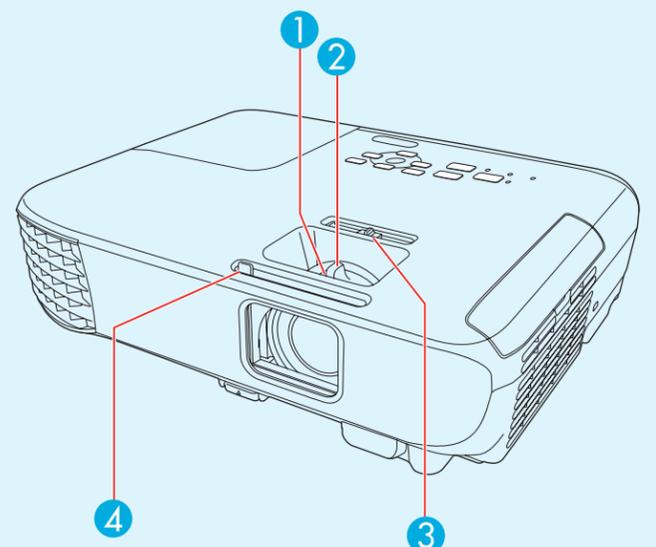

- 1 Focus
- 2 Zoom
- 3 Horizontal keystone
- 4 Lens cover